



Meal Ready Numeric Sign User Instructions For Cinema Protocol

- 1) Fit Antenna securely on Sign and Transmitter, plug in power to turn on.
- 2) To display number on sign, enter any number form **'01 to 99'** and send, on Transmitter.
If more than one number is required to be display, select the next number and send.
Numbers will display in alternate colours with a comma separator.
- 3) To remove a number enter a **NINE** before the number, eg:
If **"01"** is on sign, enter **"901"** on transmitter and send to clear **"01"**.
If **"60"** is on sign, enter **"960"** on transmitter and send to clear **"60"**.
- 4) To clear the display completely enter **999** on transmitter and send.