Sign installation instructions

for Indoor (7. 62mm), Semi-outdoor (7. 62mm/11. 43mm/15. 24mm/20. 0mm), Outdoor (16. 0mm/20. 0mm/25. 0mm)

These instructions how to mount the following signs: Indoor (7. 62mm), Semi-outdoor (7. 62mm/11. 43mm/15. 24mm/20. 0mm), Outdoor (16. 0mm/20. 0mm/25. 0mm).

Before mounting a sign, remove power from the sign.

A WARNING

Hazardous voltage.

Contact with high voltage may cause death or serious injury.

Always disconnect power to sign prior to servicing.

We provide brackets, screws and washers that need for mounting. Mounting instructions Model 1. Attach the mounting brackets to the wall. 2. Attach the sign to the mounting brackets using screws and washers as shown. Indoor or semi-outdoor (7. 62mm) one-line Top View Screws and lock washers Mounting 1. Attach the mounting brackets to the wall or ceiling. Indoor or Semi-outdoor 2. Attach the sign to the mounting brackets using screws and washers as shown. (7.62 mm)→Ceiling two-line Semi-outdoor 15. 24mm one line Mounting -Wall bracket Top View Wall Screws and lock washers 1. Attach the mounting brackets to the wall or ceiling. Indoor or Semi-outdoor 2. Attach the sign to the mounting brackets using screws and washers as shown. (7. 62mm) three and four line Semi-outdoor 11. 43mm two line Semi-outdoor 15. 24mm Top View two line Mounting bracket -Wall Screws and lock washers

